


# Installation Instructions: FAULT FINDER HINTS

**Warning!** Your energizer must NOT overpower your HorseGuard system in order to not burn the tape.  
Between 1 and 3 joules will be the maximum power supply, depending on the length of fence tape to be installed.

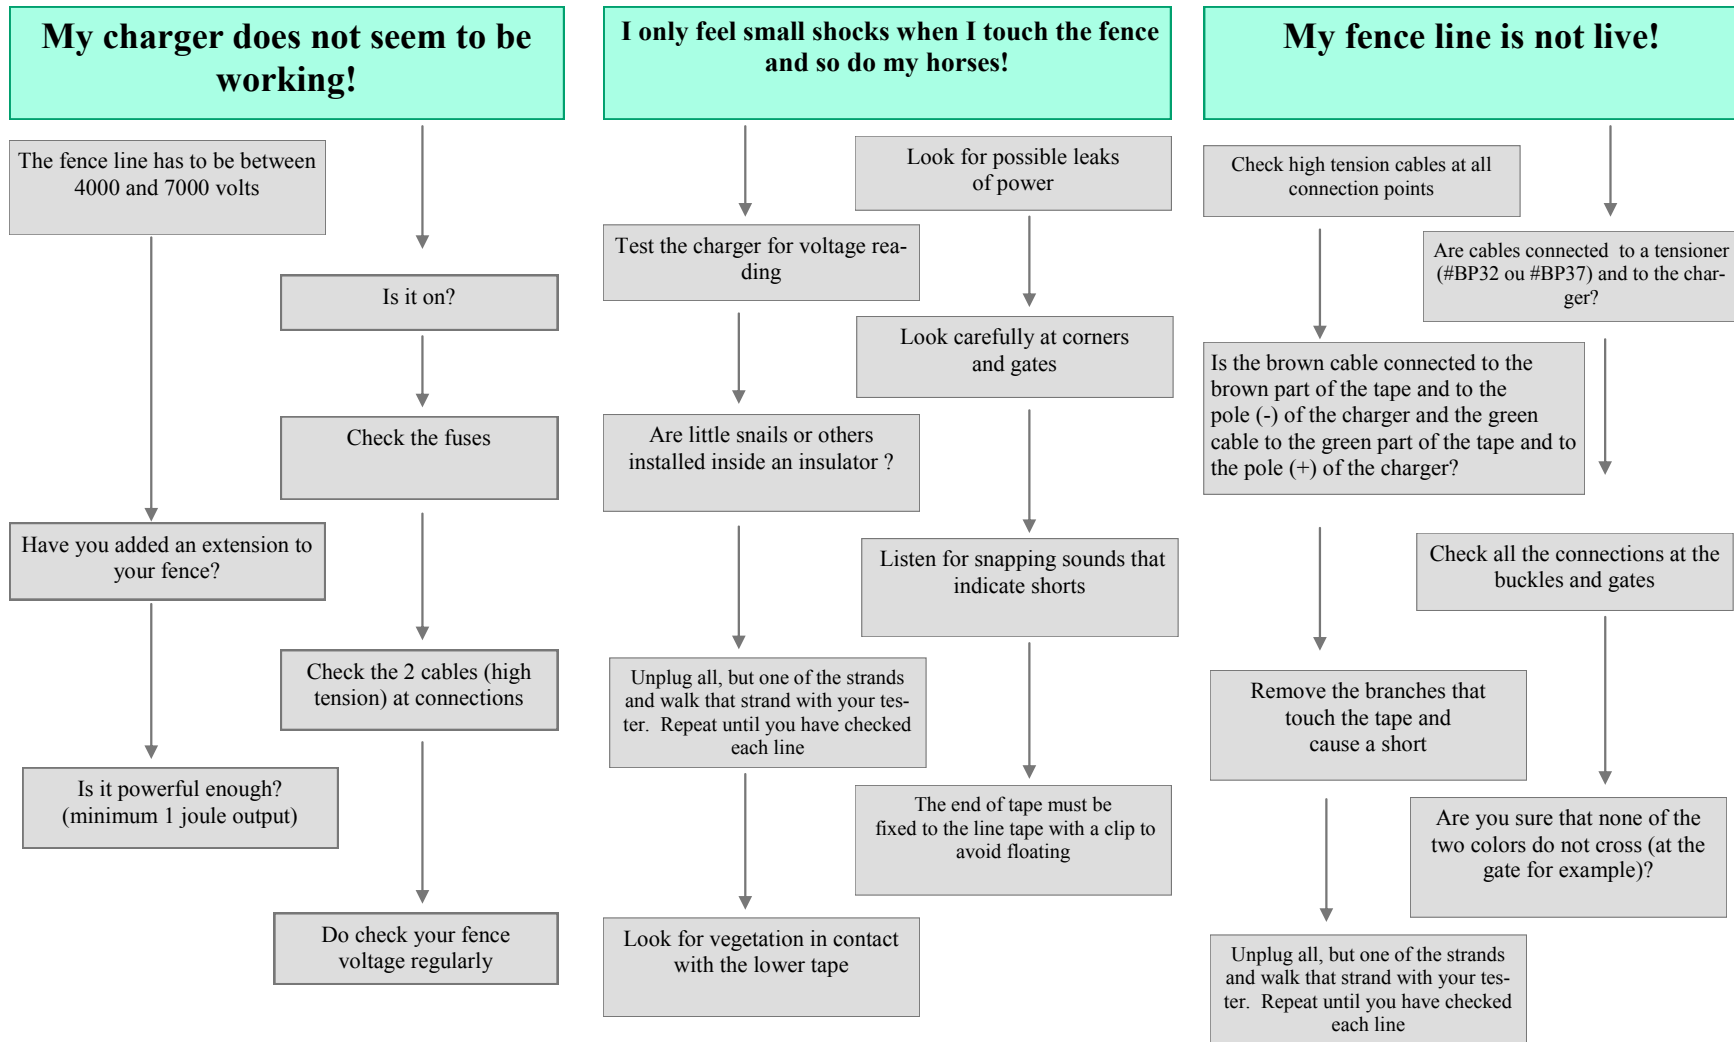

**Without a fence tester to check how hot your fence is, you're just guessing!**