

HorseGuard 2 Gate Handles : #BP13A & #BP12A

To create a gate with tape, one handle per row of tape is required.

Handle # BP13A (small space between hooks).

2 possible uses :


- with # BP37 Tensioner without cables and nuts.





#BP13A / #BP37 without cables

- with the small Tensioner # BP32 with or without connection cables.

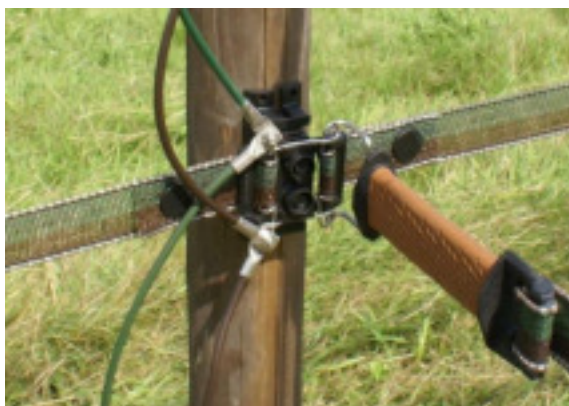


#BP13A + #BP32 with or without cables

Handle # BP12A (large space between hooks).

2 possible applications:

- With the Tensioner #BP37 + connection cables + nuts

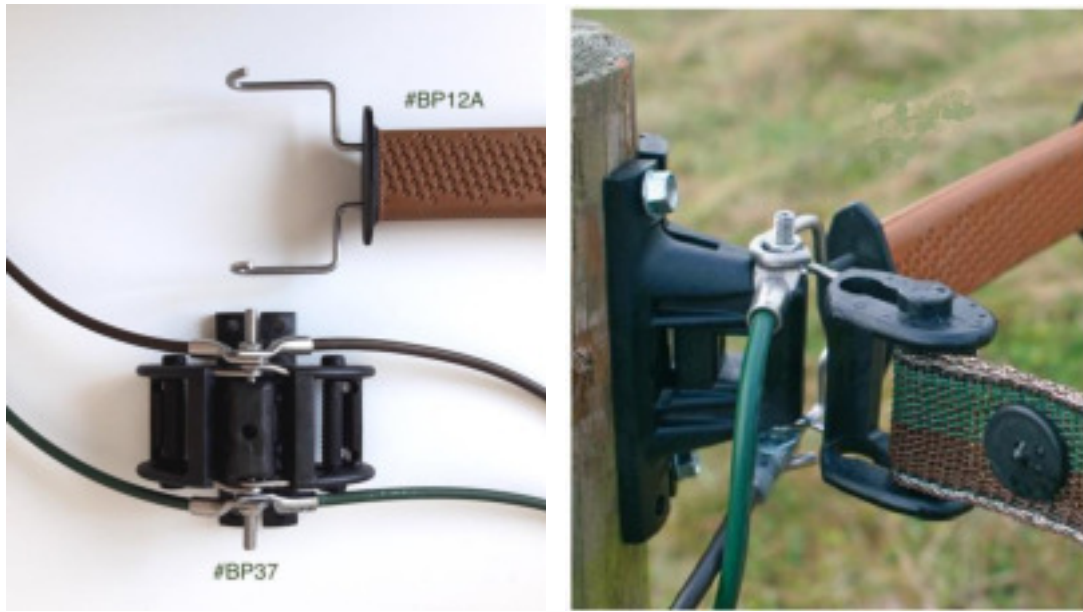

#BP12A + #BP37 + cables + nuts

- With Tensioner block #9bl (item discontinued)



#BP12A + #9bl

landrine@horseguardfencing.ca
1.800.817.6930 (TOLL FREE)
horseguardfencing.ca

