

Installation Instructions:
HORSEGUARD TENSIONER #BP37



1. Screw the #BP37 with 2 lag bolts on to a wooden post or a hose clamp on a metal post.




2. If installed at a gate, unscrew the two axles to remove one wing, creating room to attach the handle.



3. To make a T junction, a third wing can easily be installed to the axles.



4. To tension the tape, thread the tape this way.

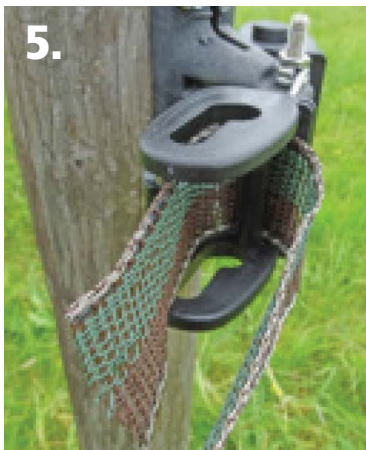

5. The end of the tape is at the back.



6. Press the 2 sections of tape together at the bottom of the buckle.



7. Insert the pin roller in front of the 2 layers of tape.



8. Use a round clip so that the tape doesn't slip. A screwdriver can make a little hole for the clip.