

Installation Instructions: **SPRING TENSIONER #BP38 FOR A TAPE GATE**



1. Insert the tape through the slot on the plastic buckle.



2. Now pass the tape back through the bigger slot.




3. Press the two sections of tape together at the bottom of the buckle with the end of the tape is at the back.



4. Insert the pin roller at the front of the 2 layers of tape.



5. Pull the pin roller to slide and pinch the tapes.

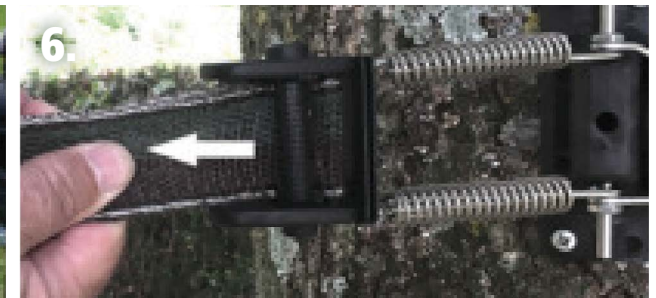

6. Pull the 2 tape sections together...



7. ... to block the pin roller.



8. Apply one round clip so the tape doesn't slip.



For ease of management,
3 strands is the maximum
recommended.