

Installation Instructions:
HORSEGUARD EXTENDER #13EX




HorseGuard Extender #13EX
set with **#LB50 lag bolts** on
wooden post or **#HC clamp** on
metal post

Safe and adaptable, extenders hold the tape 1 ft./30 cm. out from the fence posts wherever you need to protect your horses. They fit all types of posts: wooden, T-Post, round metal posts, etc. HorseGuard extender #13EX has been designed to attach to our insulators #8bl (in line) and our tensioners #BP37/#BP38/ #BP32 (on posts).

You will need for wooden posts 2 lag bolts #LB50 and for T-Posts or metal posts a clamp #HC. #13EX is sold by the unit.



HorseGuard Extender #13EX
with **insulator #8bl** on line posts

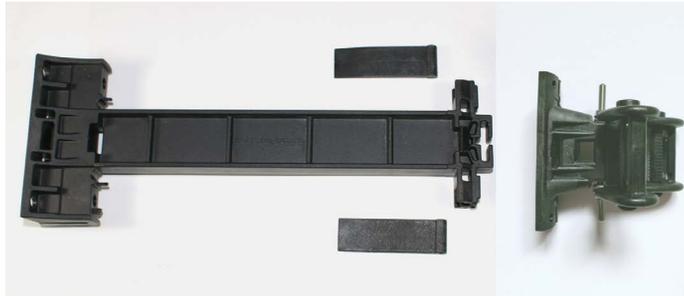

HorseGuard Extender #13EX
with **tensioner #BP37**
on tension posts



HorseGuard Extender #13EX
with **small tensioner #BP32**
on tension posts



Installation Instructions:
HORSEGUARD EXTENDER #13EX

